 
 


“+” BUTTON

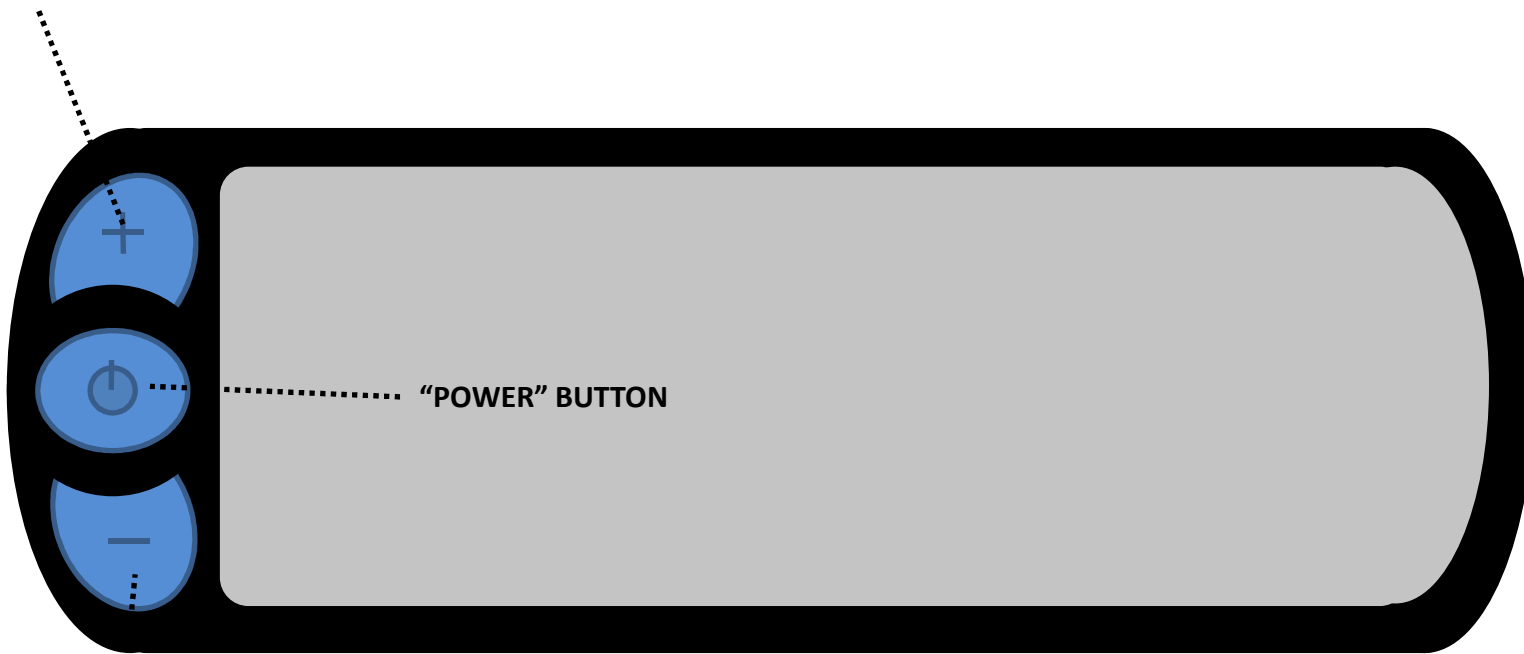

“POWER” BUTTON

“-” BUTTON





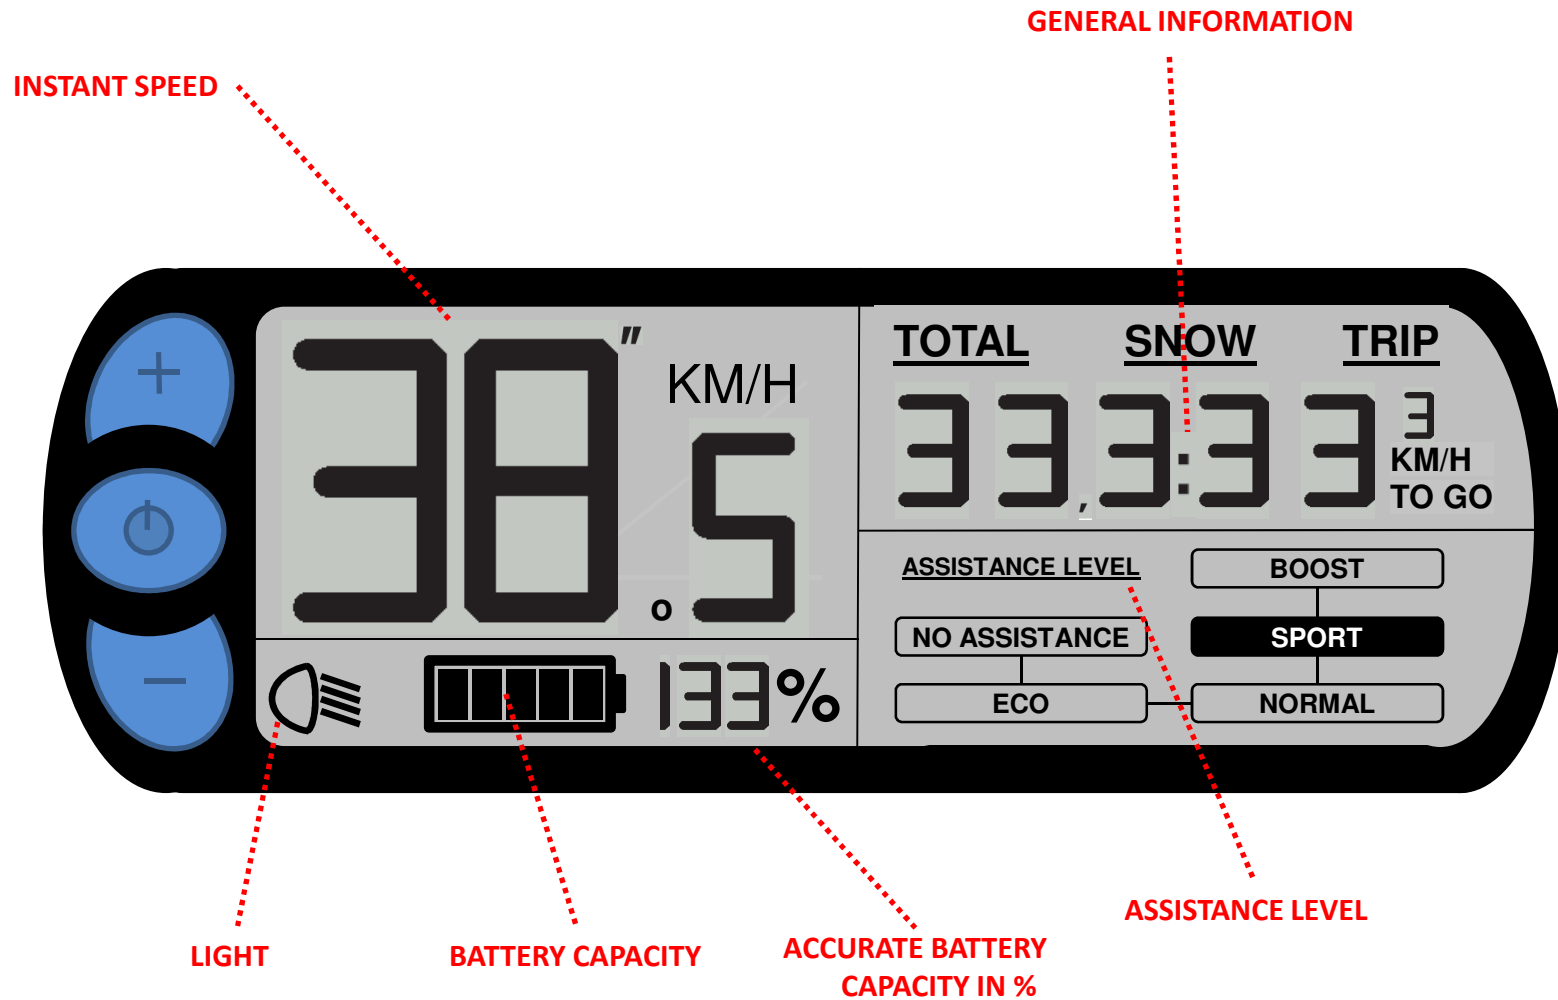


I. SWITCH ON AND SWITCH OFF THE DISPLAY PANEL

- ✓ By pushing **“POWER” button during 2 seconds**, the display panel will be switched on.
- ✓ If user pushes again **“POWER” button during 2 seconds**, the display panel will be switched off.

II. CHANGE ASSISTANCE LEVEL

- ✓ By pushing **“+” button or “-” button**, the assistance will be increased or reduced as shown below:

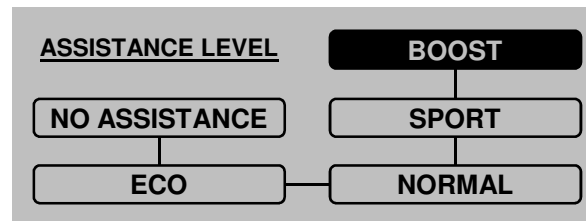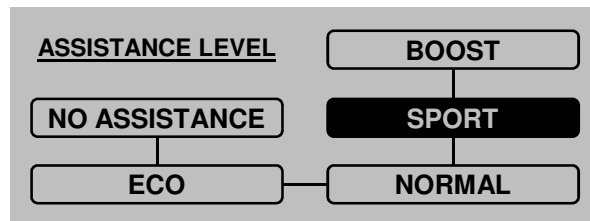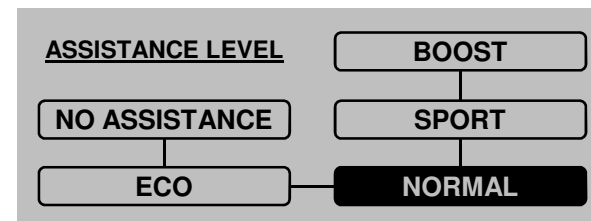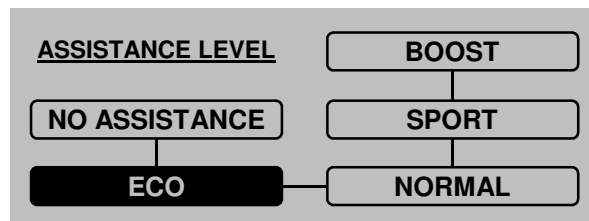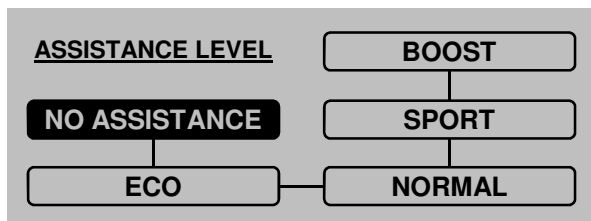

III. SWITCH ON AND SWITCH OFF THE BIKE LIGHT AND LCD BACK LIGHT

- ✓ If user pushes **“-” button during 2 seconds**, the light(s) of the e-bike and the LCD back light will be switched on. The light logo () will appear in the top left side of the LCD display, as shown below. If user pushes again **“-” button during 2 seconds** button the light(s) will be switched off.

IV. CHANGE INFORMATION IN THE DISPLAY.

- ✓ By pushing **“POWER” button**, user can move from one information to another (total distance, total time, total speed, trip distance, trip time and trip speed):

KILOMETERS	<p>TOTAL DISTANCE IN KM</p>	<p>TOTAL SPEED IN KM/H</p>	<p>TOTAL TIME</p>	<p>DISTANCE TO GO IN KM</p>
	<p>TRIP DISTANCE IN KM</p>	<p>TRIP SPEED IN KM/H</p>	<p>TRIP TIME</p>	
	<p>TOTAL DISTANCE IN MILES</p>	<p>TOTAL SPEED IN MILES/H</p>	<p>TOTAL TIME</p>	<p>DISTANCE TO GO IN MILES</p>
	<p>TRIP DISTANCE IN MILES</p>	<p>TRIP SPEED IN MILES/H</p>	<p>TRIP TIME</p>	

V. RESET TO ZERO THE TRIP INFORMATION.


- ✓ User can reset the trip information (distance, time and speed) to zero, by pushing **“POWER”** and **“-”** button during 2 seconds

VI. THROTTLE FUNCTION.

- ✓ By pushing **“+”** button during 2 seconds, the throttle will be activated up to 6km/h.
- ✓ At the moment the user stop pushing **“+”** button the throttle function is deactivated.

VII. CHANGE WHEEL SIZE.

- ✓ By pushing **“+”** and **“-”** buttons during 2 seconds, the user can change the size of the wheel. The user will use the **“+”** or **“-”** button to increase or reduce the size. Once the size is selected the user will push **“POWER”** button.

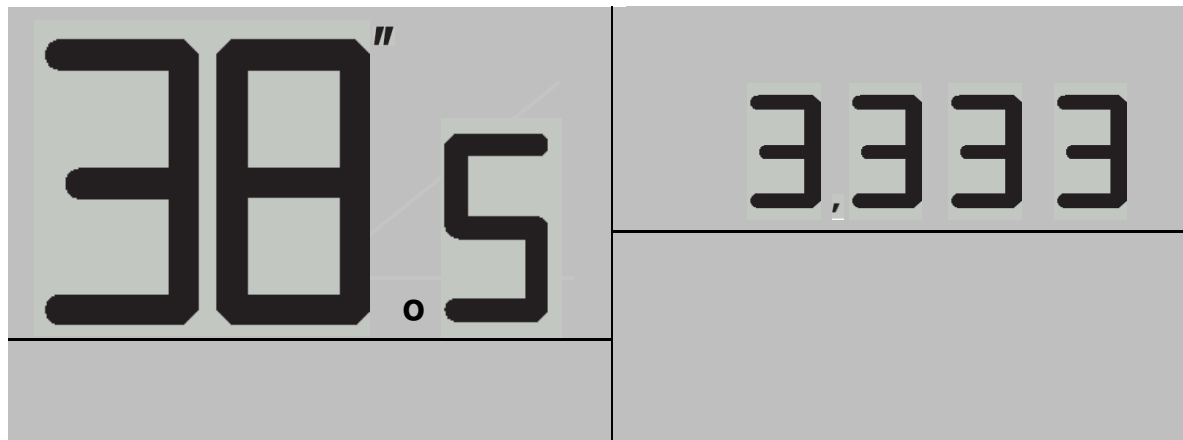

VIII. CHANGE KM TO MILES

- ✓ By pushing **“+” and “-” buttons during 2 seconds**, the user can change from Km to Miles and viceversa. The user will use the **“+” or “-”** button to move from one to the other and accept by pushing **“POWER”** button.

IX. CHANGE MOTOR USE IN SNOW MODE.

- ✓ By pushing **“+” and “-” buttons during 5 seconds (only in SNOW models)**, the user can change the type of use of the motors (Only Front, Only Rear, All or Eco). The user will use the **“+” or “-”** button to move from one to the other and once the motor use is selected the user will push **“POWER”** button.



SUMMARY OF FUNCTIONS:

	POWER	(+)	(-)	
Switch on / off	2 sec.			
Change Assistance Level		Push	(or) Push	
Lights			2 sec.	
Change Information	Push			
Reset Trip Information	2 sec.		2 sec.	Same time
Throttle		2 sec.		
Change Wheel Size	2 sec.	2 sec.		Same time
Change KM to Miles		2 sec.	2 sec.	Same time
Change Motor Use (Snow)		5 sec.	5 sec.	Same time